

800i PVC

Moderate, PVC specialized extraction unit

PUREX
CLEAN AIR FOR EVERYONE



Description & features

- Clear & informative graphic display
- Highest grade HEPA and carbon technology
- Automatic electronic flow control - maintains a constant extraction rate even as the filter blocks
- Gas and particle sensors to warn the operator
- Adjustable airflow
- Specialized coating to prevent corrosion from PVC fumes

Filters



 
Main Filter Code
113648

Description
Chemical PVC



Main Filter Code
113649

Description
HEPA / Chemical PVC



Pre-Filter Code
110618

Description
Granular Pad PVC



Pre-Filter Code
111101

Description
F8 / F9 Labyrinth



Pre-Filter Code
200039

Description
Chemical Absorbant Pad

Specifications

Voltage	120v	230v
Part Number	080500DPVC	080501DPVC
Wattage	2.4kW	
Frequency	50Hz / 60Hz	
Cabinet Height	1155mm	
Cabinet Width	571mm	
Cabinet Depth	675mm	
Cabinet Weight	100kg	
Airflow	800m3/h	
Sound Level	60dBa	

Machine supplied with

• 2 x Main Filter • 2 x Pre-filter • 1 x Absorbant Pad • 1 x Manual • 1 x 4.5m Fixed Power Cable (No Plug)

Find out more: W.purex.co.uk | [T +44 \(0\)1405 746030](tel:+441405746030) | [E purex@purex.co.uk](mailto:purex@purex.co.uk)

Registered Office: Purex International LTD, Unit A, Saltgrounds Road, Brough, HU15 1EG, UK

Registered No. 5136616 England | VAT No. GB842 5025 49 | WEEE Producer Registration Number: WEE/CE0067TX

*Goods are subject to change | *Illustrations are 3D created visual representations

 
 
800i PVC

Moderate, PVC specialized extraction unit

Options

Connection kits


If you do not see a connection kit that fits your machine or pipework, please contact Purex or your representative

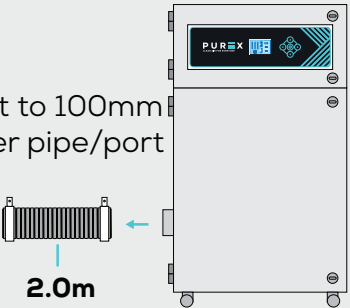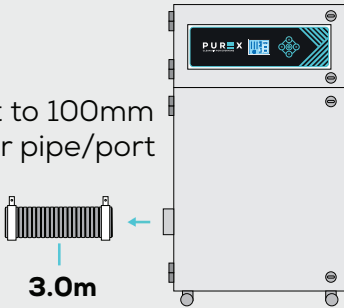100105			100107		
Hose End Diameter	Hose Length	Purex Inlet Diameter	Hose End Diameter	Hose Length	Purex Inlet Diameter
100mm	2m	100mm	100mm	3m	100mm
Connect to 100mm diameter pipe/port 			Connect to 100mm diameter pipe/port 		

Interfacing

Interfacing can remotely start the Purex machine when the connected machine starts.

 Interfacing can also warn the connected machine when the Purex machine is in alarm.

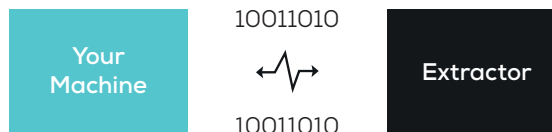

Take a look through our [Interfacing Guide](#) to see our extensive range of options