

400i PVC

Moderate, PVC specialized extraction unit

PUREX
CLEAN AIR FOR EVERYONE



Description & features

- Clear & informative graphic display
- Highest grade HEPA and carbon technology
- Automatic electronic flow control - maintains a constant extraction rate even as the filter blocks
- Gas and particle sensors to warn the operator
- Adjustable airflow
- Specialized coating to prevent corrosion from PVC fumes

Filters



Main Filter Code

113498C

Description

HEPA/Chemical



Pre-Filter Code

111097

Description

F8 / F9 Labyrinth



Pre-Filter Code

200037

Description

Chemical
Absorbant Pad

Specification

Voltage	120v		230v	
	Vacuum Part Number		OPV4013D	OPV4010D
Wattage	1.2kW			
Frequency	50Hz / 60Hz			
Cabinet Height	1195mm			
Cabinet Width	465mm			
Cabinet Depth	528mm			
Cabinet Weight	70kg			
Airflow	400m ³ /h			
Sound Level	<60dBa			

Machine supplied with

- 1 x Main Filter • 1 x Pre-filter • 1 x Absorbant Pad • 1 x Connection Kit
- 1 x Power Cable • 1 x Manual

Find out more: W purex.co.uk | [T +44 \(0\)1405 746030](tel:+44(0)1405746030) | [E purex@purex.co.uk](mailto:purex@purex.co.uk)

Registered Office: Purex International LTD, Unit A, Saltgrounds Road, Brough, HU15 1EG, UK

Registered No. 5136616 England | VAT No. GB842 5025 49 | WEEE Producer Registration Number: WEE/CE0067TX

*Goods are subject to change | *Illustrations are 3D created visual representations

400i PVC

Moderate, PVC specialized extraction unit

Options

Pre-filter


Code	Description
111057	F6 Labyrinth

Connection kits

If you do not see a connection kit that fits your machine or pipework, please contact Purex or your representative

100043C (coated to prevent corrosion)		
Hose End Diameter	Hose Length	Purex Inlet Diameter
50mm	6m	80mm


Connect to 50mm diameter pipe/port or Purex valve

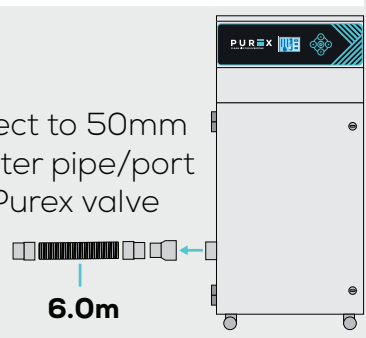

6.0m

120299		
Hose End Diameter	Hose Length	Purex Inlet Diameter
80mm	3m	80mm

Connect to 80mm diameter pipe/port

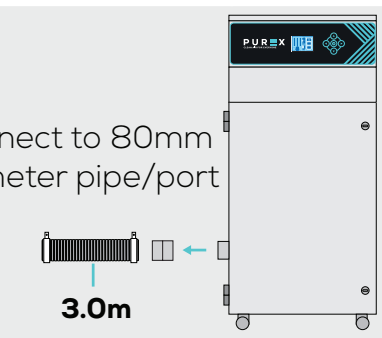

3.0m

Interfacing

Interfacing can remotely start the Purex machine when the connected machine starts.

Interfacing can also warn the connected machine when the Purex machine is in alarm.

Your Machine

10011010



Extractor

10011010

Take a look through our [Interfacing Guide](#) to see our extensive range of options